


# Configure PerfectCue

PC-Micro v 2.0

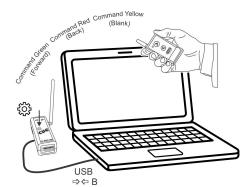

Connect a USB data cable to one of the "C" ports.

Launch the app.

Press Settings (\*), if requested. The Yellow LED blinks as the device exposes its memory to the computer and is recognized as a new, lettered drive – "PERFECTCUE (D:)".

View the keystroke shortcuts associated with each transmitter button. These control presentations on connected computers.

#### Click a command.

Enter a new keystroke such as [PG DN] or [SPACE], or a keystroke macro such as [Ctrl] [+] into the edit dialog.

To disable a transmitter key such as the blank button, enter a null value.

# **SAVE**

# Sound Cue (PortA)

Sounds are not available on this version of the PC-Micro.


#### **Light Cue Animation**

Animations are not available on this version of the PC-Micro.

# **Keystroke Delay**

Slide changes can be delayed for up to 1 second after PC-Micro receives the wireless command. Why would you want this? See below\*\*.

# **SAVE ALL SETTINGS**

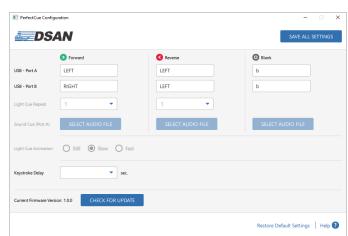



# **Update the Firmware**

# **CHECK FOR UPDATE**

Download and save a new version of the file "PerfectCue.zip to your computer. It contains the firmware file "PerfectCue.bin" and a pdf file that explains new features or improvements.

Browse for the PerfectCue.bin file. Open. UPLOAD.


Unplug the USB cable(s). Reconnect. Test.

# **Popular Shortcuts for Presentation Applications**

Command	PowerPoint® (Windows)	Keynote® (MAC)	ProPesenter® (MAC)	
			Windows	MAC
Forward	RIGHT [▶]	DOWN [ <u>▼</u> ]	RIGHT [ <u>▶</u> ]	RIGHT [ <u>▶</u> ]
Back	LEFT [ <u>◀</u> ]	UP [ <u></u>	LEFT [◀]	LEFT [ <u>◀</u> ]
Screen Blank	[ <u>b</u> ]	[ <u>b</u> ]	F2	F2
Screen White	[ <u>w</u> ]	[ <u>w</u> ]		
Enlarge Image	[ <u>Ctrl</u> ] [ <u>+</u> ]	COMMAND [ $\mathbb{H}$ ] [ $\geq$ ]		
Start/Stop VIdeo	[ <u>Alt]</u> [ <u>P</u> ]	[SPACE]		

# \*\*Slide Change Delay

Have you ever been to an airport or a large train station? Important announcements are often preceded by a chime, a short musical motif, or a simple word like "Announcement!" These are designed to get travelers' attention before important information is delivered. Larger PerfectCue models have cue sounds that alert the audience. PC-Micro has no sounds. A delay can create a brief silence of the presenter's anticipation and helps cue viewers to a slide event.

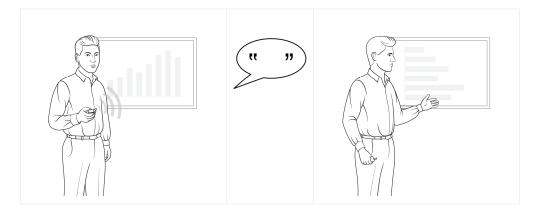

sales@dsan.com **DSAN**